

DataChart 1250 Paperless Data Acquisition System Technical information









DataChart 1250 Overview

The DC1250 is a feature rich digital recording system offering 2 universally configurable inputs for measuring DC voltage, DC current, thermocouples and RTD's as well as frequency and pulse inputs. 4 internal alarm setpoints, 2 alarm relay outputs and 1 digital control input are all standard. Combining small package size with extreme flexibility make the DataChart 1250 a powerful, yet economical, digital data recording system.

A maximum sample storage rate of 100 samples per second can be set for both channels allowing for capture of short duration process signals anomalies. CompactFlashTM cards up to 2 Gigabyte size can be used allowing many data points to be stored over long periods of time.

With intuitive operation, flexible input configuration and large memory capability, the DataChart 1250 is a powerful, compact digital recorder.

DataChart 1250 Features

Communicate

Communication options include Ethernet or USB. When used with Navigator software the user has full remote control of all recorder functions. Data can be transferred from the CompactFlash™ card to the PC or can be viewed in real-time graphic format and stored to a remote hard drive.

Bright and Clear Display

The DC1250 has a highly reflective twisted nematic LCD display with a bright white LED backlight. The graphic user interface can be configured to display real time data in digital or trend format. Configuring the 1250 is an intuitive process which uses an easy to follow menu system.

Versatile Power

The DC1250 is supplied with a universal wall transformer power supply that can operate from 100 to 240Vac 50/60Hz. It includes interchangeable plugs for North America, Australia, UK and Europe.

An optional isolated input power of 12-24Vdc is also available for use with instrument power supplies or external batteries.

The DC1250's real time clock and internal RAM have a battery back-up to preserve data in the event of a power loss.

If losing data during a power outage is a concern, the user can add the rechargeable battery pack option. With the battery pack option installed, the DC1250 automatically keeps the rechargeable NiMH batteries charged to capacity. In the event of a power loss, the DC1250 automatically switches over to internal battery power. All functions continue to operate as normal for up to 6 hours! This option is also great for using the DC1250 in areas where no AC or DC power is available.


Measure RPM

The DC1250 can be used in conjunction with many of Monarch's speed measurement sensors. Power for sensors is provided from the DC1250 rear terminals. Measure, display and record RPM ranges from 5 - 600,000. Choose the sensor best suited for your application or take your existing signal directly into the 1250.



DataChart 1250 Paperless Recorder





Dual Trend



Dual Digital Inversed



Split Screen



Dual Digital



Internal rechargeable NiMH battery pack



DataChart 1250 Specifications

Input Power: Standard: 9 Vdc +/- 0.5Vdc @ 5VA (depends on

external loads) provided by external AC wall transformer (provided), non-

isolated. 100-240Vac 50/60Hz Isolated 12-24 Vdc input power

Option: available (not compatible with internal

battery pack option below).

Option: Internal battery pack provides

> uninterrupted operation and controlled shutdown during blackout. 6Vdc, 2400mAH NiMH - Backup Time; 6 hours typical (depends on external load).

2 outputs 5Vdc @ 50mA to power external sensors.

Number of Channels: 2 universal, user programmable.

Isolation: 300V AC/DC channel input to chassis ground

DC Input: **Voltage**

Output:

Thermocouple:

RTD:

Ranges: 0-250mV; 0-1.25V; 0-2.5V; 0-5V;

0-12.5V; 0-25V

Accuracy: 0.1% of reading Resolution: 0.025% of full scale

Current

Ranges: 0-20mA; 4-20mA; 0-50mA; 10-50mA

Accuracy: 0.1% of reading excluding 250 ohm

external shunt (required).

Resolution: 0.025% of full scale

Accuracy: 0.3% of full scale (typical). Ambient Temperature Sensor Accuracy: ±1.5°C

<u>Type</u> Range

J -100 to 760°C ±2°C (-148 to 1400°F ±3°) K^1 -100 to 1000°C ±2°C (-148 to 1832°F ±3°) K2 0 to 1370°C ±2°C (32 to 2498°F ±3°)

T -240 to 400°C ±2°C (-480 to 750°F ±3°) **E** -80 to 400°C ±2°C (-112 to 750°F ±3°)

Accuracy: 0.3% of full scale (typical).

Resolution: 0.1°C

Internal current source: 1mA

Range

100 Ohm Pt 385 -100 to 750°C (-148 to 1380°F) 100 Ohm Pt 392 -100 to 750°C (-148 to 1380°F)

2 or 3 wire.

Frequency Input (Hz)/ Range: 0 - 10,000 Hz / 0 - 600,000 RPM Speed Input (RPM): Freq: ±1 Hz; RPM: ±1 RPM below Accuracy:

9,999 RPM; ±10 RPM above 9,999 RPM

Input: Low <1.0Vdc; High >3.0 <12.0Vdc

Pulse width: 10 microsecond minimum.

Input Impedance: >100k ohms

Measurement Rate: Up to 100 samples/sec per channel.

Math Function: Y = mx + b; average, hi peak, low peak,

totalization.

Compact Flash to 2 GB. Media:

Display: LCD Graphics, 160 x 80 pixels, black FSTN with

white LED backlight. User controlled backlight

level and contrast adjust (electronic).

2 3/4" W x 1 1/2"H x 3 1/4" Diag.

Display Modes: Trending (horizontal), Large dual digital

readout, mixed mode.

User Interface: 5 button keypad (dual function buttons).

Auto leap year and daylight savings adjustment. Clock:

Internal battery back-up.

Relay Output: Two alarm outputs: 30V 0.5A Form A relays

Opto-isolated Input: One input, 5 to 12Vdc activation @ 10mA typical.

Audible: Internal beeper (multiple tones).

Dimensions: Front panel: 96mm x 96mm (1/4 DIN) x 152mm

(3.78 x 3.78 x 6 inches).

Environmental: Indoor Use Only

> Installation Category II per IEC 664 Pollution Degree Level II per IEC61010-1 Temperature: -10°C to 50°C operating per IEC

61010-1

Humidity: maximum relative humidity 80% for temperatures up to 31°C, decreasing linearly to

50% relative humidity at 40°C.

Electrical Safety: Meets EN61010-1Ed.3.0 2010. Power supply


certified UL, cUL.


Optional USB: Front panel USB 2.0 slave port for data and

remote real-time display when using Navigator

software.

Ethernet: Real time data display, historic data transfer, remote control and recorder configuration when using Navigator Software. Built in web server displays current measured values. Rear panel port.




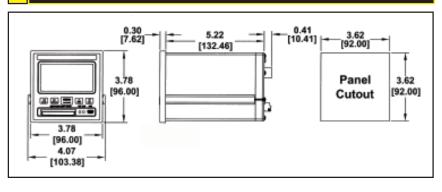




Rear Panel

DataChart Navigator Software

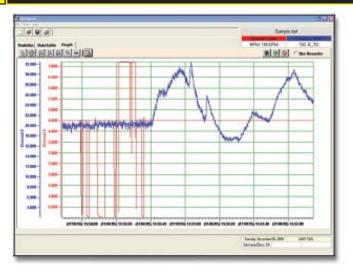


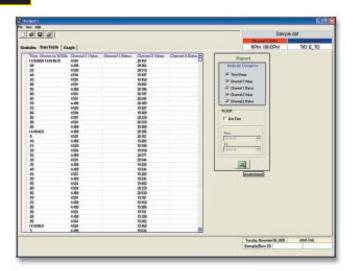

DataChart Navigator software makes reviewing, printing and exporting data easier than ever. Simply start the program, double click the data file and **Navigator** does the rest. Your data file is displayed in one graphic window complete with the scales as programmed in the DC1250 as well as date and time stamps. You can expand, compress or use the box zoom to display specific areas of data as needed. The print preview feature allows review prior to printing. With the optional USB or Ethernet communications, Navigator turns your computer into a real-time data acquisition system as graphical data is streamed in and displayed. These "snap-shot" files can be saved in addition to files being stored on the DC1250. The built in Ethernet webserver allows you to view real-time data using only a web browser. Exporting data is as simple as clicking the ExcelTM Icon in the Data table export window. **Navigator** automatically converts the historic data, starts up ExcelTM and loads your data into an organized spreadsheet.

Minimum system Requirements: PC running Windows® 2000 or XP, 40 MB free disk space and CD ROM Drive.

DataChart 1250 Ordering Information

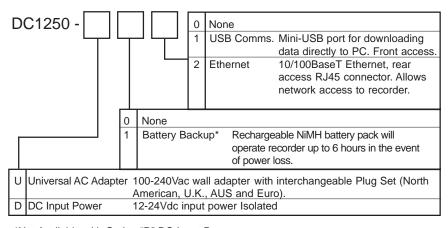

^{*}Not Available with Option "D" DC Input Power.



© Monarch Instrument 2015
All Trademarks remain the exclusive property of their respective owners. Monarch Instrument pursues a policy of continuous product improvement.
The specifications in this document may therefore be subject to change without notice. The information provided in this document is intended for guidance only. Monarch Instrument accepts no responsibility for any losses arising from errors or omissions in this document.5/15 1K TJF

DataChart 1250 Accessories

Model No.	<u>Description</u>
Navigator	Windows Compatible Software for graphic
	analysis, printing, transfer, real-time trending
	and exporting.
CFCR	CompactFlash™ Card Reader USB 2.0
	compatible
MAS250R	250 ohm Precision Resistor for current
	inputs. 0.1% 0.25 watt
NIST-1250	N.I.S.T. Calibration with data

Nema 4X Kit

CompactFlash™ Memory Cards

MC512MBCF 512 Megabyte
MC1024MBCF 1 Gigabyte
MC2048MBCF 2 Gigabyte



Hinged NEMA enclosure with

removable clear front cover

Sensors (Plug and Play)

THP-W Temp/Humidity Probe with 8 foot cable
ROS-W Remote Optical Sensor with 8 foot cable,
mounting bracket and 12 inches of

reflective tape

MT-190W Magnetic Trigger Sensor/Amplifier with 8

foot cable

IRS-W Infrared Sensor with 8 foot cable, tinned

wires and mounting bracket

Distributed by:



15 Columbia Drive Amherst, NH 03031-2334

Tel: (603) 883-3390 Fax: (603) 886-3300 email: sales@monarchinstrument.com Web: www.monarchinstrument.com